



Leading the way in test and measurement

Vicom Australia Pty Ltd
1064 Centre Road
Oakleigh South VIC 3167
Australia
P: +61 3 9575 0111
www.vicom.com.au

2-22 Lexington Drive
Bella Vista
NSW 2153
Australia

OLT-55 Firmware Upgrade procedure.


The OLT-55 firmware upgrade instruction is as follows:

Press "" enter "Setup" → "Device Info". Press "" and "" to highlight [Device Info], Press "" to enter Device Info interface to check OLT-55 firmware version.

PLEASE KINDLY NOTE DOWN THE CURRENT OLT-55 FIRMWARE BEFORE LATEST FIRMWARE UPGRADING.

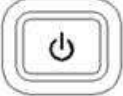

1. Connect PC with OLT-55 via USB cable



2. Turn on OLT-55, press "" enter "Setup" → "System Setting" → "USB configuration", Select "Mass Storage" to enable OLT-55 as an USB storage device.

Press "" then PC will regard OLT-55 as "Portable U disk" and show "Portable U disk" on PC.

3. Copy OLT-55 firmware V2.24 into "Portable U disk" of OLT-55.

4. Turn off OLT-55 and return it on

5. Press "" and "" together for several seconds, the sentence "File opened" will be shown on OLT-55 screen, later the upgrading process % will be shown on OLT-55 screen.

6. Turn off the unit and turn on again. Press "" enter "Setup" → "Device Info". Press "" to enter "Device Info" to check OLT-55 firmware version whether it has been upgraded successfully or not.